



**Declaration of Conformity (Europe/Turkey only)**  
We, Brother Industries, Ltd.  
15-1, Naeshiro-cho, Mizuho-ku,  
Nagoya 467-8561 Japan  
declare that these products and AC adapter are in conformity with the relevant EU harmonization legislation (Europe/Turkey only) and UK legislation (Great Britain only).  
The Declaration of Conformity (DoC) can be downloaded from the Brother support website.  
Visit [support.brother.com/manuals](http://support.brother.com/manuals).

**Safety Precautions**

- A WARNING**  
Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injuries. Follow these guidelines to avoid personal injury, liquid leakage, burns, or heat.
- When you are not using the machine, store it out of the reach of children. In addition, do not allow children to put the machine parts or labels in their mouths. If any object has been swallowed, seek medical attention.
  - Do not touch metal parts around the print head immediately after printing.
  - If leaked fluid from batteries gets on your skin or clothes, immediately rinse them with clean water.
  - Do not use a battery other than specified. Do not use combinations of old and new batteries or combinations of different types, charging levels, manufacturers or models. Do not insert a battery with its plus and minus ends reversed.
  - Do not drop or hit the machine/AC adapter.
  - Do not press on the LCD (Liquid-Crystal Display).
  - Do not use your finger to clean the machine when you close the cassette cover.
  - Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
  - When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
  - Do not drop or hit the machine/AC adapter.
  - Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage. Failure to do so could result in damage or failure of the machine.
  - Do not use the machine/AC adapter in places of high humidity, such as bathrooms.
  - Do not overload the power cord.
  - Do not place heavy objects on, damage, or modify the power cord or plug. Do not forcibly bend or pull the power cord. Always hold the AC adapter when disconnecting from the electrical socket.
  - Make sure you fully insert the plug into the electrical socket. Do not use a socket that is loose.
  - Do not use the machine/AC adapter/power plug/batteries to get wet, for example by handling them with wet hands or splashing water on them.
  - Since loss of eyesight may occur when leaked fluid from batteries gets into your eyes, immediately rinse your eyes with plenty of clean water, and then seek medical attention.
  - Do not disassemble or modify the machine/AC adapter/batteries.
  - Do not allow a metal object to contact both the plus and minus ends of a battery.
  - Do not throw the batteries into fire or expose to heat.
  - Disconnect the AC adapter and remove batteries immediately and stop using the machine if you notice abnormal odour, heat, discolouration, deformation, or anything unusual while using or storing it.
  - Do not use a damaged or leaking battery as the fluid may get on your hands.
  - Do not use a deformed or leaking battery or one whose label is damaged as it may generate excessive heat.

**Deutsch****Konformitätserklärung (nur Europa/Türkei)**

Wir, Brother Industries, Ltd.  
15-1, Naeshiro-cho, Mizuho-ku,  
Nagoya 467-8561 Japan  
erklären, dass sich dieses Produkt und der Netzadapter in Übereinstimmung mit den wesentlichen Anforderungen aller in den Europäischen Union angewandten relevanten Richtlinien und Bestimmungen befindet.

Die Konformitätserklärung kann von der Brother Support Website heruntergeladen werden.  
Besuchen Sie [support.brother.com](http://support.brother.com) und:

- wählen Sie „Handbücher“ aus;
- wählen Sie Ihr Modell aus;
- klicken Sie auf „Herunterladen“.

Die Konformitätserklärung wird als PDF-Datei heruntergeladen.

**Sicherheitshinweise**

- A WARNING**  
Weist auf eine potentielle Gefahrensituation hin, die, falls sie nicht vermieden wird, zu ernsten oder lebensgefährlichen Verletzungen führen kann.  
Befolgen Sie diese Richtlinien, um Feuer-, Verbrennungen-, Verletzungen-, Stromschlag-, Bruch-, Überhitzung-, unanständige Gerüche oder Rauch zu vermeiden.
- Betreiben Sie das P-touch Beschleunigungsradar ausschließlich mit dem spezifizierten Netzadapter und schließen Sie den Gerät an einen Netzstecker an, der die spezifizierte elektrische Spannung. Eine Nichtbeachtung dieser Anweisungen kann zu einer Beschädigung oder einem Ausfall des Geräts führen.
  - Niemals während eines Lagers der Geräte verbleiben.
  - Das Gerät / den Netzadapter nicht in Umgebungen mit hoher Luftfeuchtigkeit (z. B. in einem Badezimmer) verwenden.
  - Das Adapternetzteil nicht übermäßig beladen.
  - Netzadapter oder Netzstecker nicht modifizieren oder mit schweren Objekten beladen. Das Adapternetzteil nicht übermäßig ziehen oder drücken. Immer den Netzstecker festhalten, wenn Sie ihn aus der Steckdose ziehen.
  - Achten Sie darauf, den Netzstecker bis zum Anschlag in die Steckdoe zu stecken. Keine Steckdoe mit nur einem Ende des Netzteckers zu ziehen.
  - Das Gerät / den Netzstecker / den Netzteckeder / die Batterien nicht waschen lassen, etwa durch Anfassen mit nassen Händen oder durch Verschütten von Flüssigkeiten.
  - Das Eindringen von ausgelaufenem Batterieflüssigkeit in die Augen kann zum Verlust des Augeneitens führen. Spülen Sie deshalb in diesem Fall die Augen mit reichlich sauberem Wasser und suchen Sie anschließend einen Arzt auf.
  - Das Gerät / den Netzadapter / die Batterien nicht zerlegen oder modifizieren.
  - Wichtig: Sei metallische Gegenstände eine Verbindung zwischen Plus- und Minuspol der Batterie bilden können.
  - Zum Batteriewechsel keine spitzen Objekte wie Pinzetten oder Metallstifte verwenden.
  - Die Batterien nicht ins Feuer werfen oder großer Wärme aussetzen.
  - Wenn Sie einen unanständigen Geruch, Wärmebildung, Verfärbung, Verformung oder etwas anderes während des Betriebs oder der Lagerung des Geräts feststellen, ziehen Sie sofort den Netzadapter und nehmen Sie die Batterien aus dem Gerät.
  - Keine beschädigten oder auslaufenden Batterien verwenden, da die Flüssigkeit auf die Hände gelangen könnte.
  - Keine verformten oder auslaufenden Batterien oder solche mit beschädigtem Etikett verwenden, da es sonst zu einer übermäßigen Wärmeentwicklung kommen kann.

**Français****Déclaration de conformité (Europe/Turquie uniquement)**

Nous, Brother Industries, Ltd.  
15-1, Naeshiro-cho, Mizuho-ku,  
Nagoya 467-8561 Japan  
déclarons que ce produit et l'adaptateur secteur sont conformes aux exigences fondamentales de toutes les directives et réglementations pertinentes appliquées au sein de la Communauté Européenne. Vous pouvez télécharger la Déclaration de conformité depuis le Site Internet Brother support. Visitez [support.brother.com](http://support.brother.com) et :

- sélectionnez "Manuels";
- selectionnez "Modèle";
- selectionnez "Déclaration de conformité";
- cliquez sur "Télécharger".

Votre Déclaration sera téléchargée au format PDF.

**Consignes de sécurité**

- Avertissement**  
Indique une situation potentiellement dangereuse qui, si elle n'est pas évitée, peut entraîner la mort ou de graves blessures. Suivez ces recommandations pour éviter tout risque d'incendie, de brûlure, de blessure, de chocs électriques, de ruissellement, de surchauffe, d'odeurs anomales ou de dégagement de fumée.
- Utilisez toujours l'adaptateur secteur recommandé pour l'étiqueteuse P-touch et branchez-le sur une prise délivrant la tension spécifiée, faute de quoi vous risqueriez d'endommager l'appareil ou de provoquer sa défaillance.
  - Ne touchez pas l'appareil pendant un usage.
  - Ne retirez pas l'adaptateur secteur dans des lieux humides (tels qu'une salle de bain).
  - Ne surchargez pas le cordon d'alimentation.
  - Veillez à ne pas placer d'objets lourds sur le cordon d'alimentation ou la prise, à ne pas l'endommager et à ne pas le modifier. Ne courbez pas excessivement le cordon d'alimentation. Tenez toujours l'adaptateur secteur lorsque vous le débranchez de la prise électrique.
  - Veillez à insérer complètement la fiche dans la prise électrique. N'utilisez pas une prise mal fixée.
  - Veillez à ne pas débrancher l'adaptateur secteur ou la prise de courant d'alimentation ou les piles en manipulant avec des mains mouillées ou en renversant le liquide dessus.
  - Le contact direct avec les yeux en cas de fuite du fluide contenu dans les piles pouvant entraîner une perte de la vue, rincez immédiatement avec de l'eau propre et nettoyez l'oeil.
  - Ne démontez pas l'adaptateur secteur ou les piles.
  - Ne laissez pas des objets métalliques entrer en contact avec les piles posées et négligez d'éteindre une pile.
  - N'aspirez pas de la pression forte sur le couvercle de la cassette à ruban.
  - Ne posez pas d'objets pointus, tels qu'une pince à épiler ou un stylo métallique, pour changer les piles.
  - Ne jetez pas les piles au feu ou ne les exposez pas à la chaleur.
  - Débranchez l'adaptateur secteur, retirez immédiatement les piles et arrêtez d'utiliser l'appareil si vous remarquez une odeur, un dégagement de chaleur, une décoloration, une déformation ou tout autre événement suspect ou une utilisation ou l'enregistrement de l'appareil.
  - N'utilisez pas une pile endommagée ou qui fut ou qui une pile dont l'étiquette est endommagée, car elles peuvent gêner une chaude exécution.

**Attention**

Indique une situation potentiellement dangereuse qui, si elle n'est pas évitée, peut entraîner des blessures mineures ou légères.

**Nederland****Conformiteitsverklaring (alleen Europa/Turkije)**

Wij, Brother Industries, Ltd.  
15-1, Naeshiro-cho, Mizuho-ku,  
Nagoya 467-8561 Japan  
verklaren dat dit product en de netspanningsadapter voldoen aan de essentiële vereisten van alle relevante richtlijnen en regelingen die van toepassing zijn in de Europese Gemeenschap. De Conformiteitsverklaring kan van het Brother support website worden gedownload.

Ga naar [support.brother.com](http://support.brother.com):

- selecteer "Handleidingen"
- selecteer uw model
- selecteer "Conformiteitsverklaring"
- klik op "Download".

De verklaring wordt gedownload als PDF-bestand.

**Veiligheidsmaatregelen**

- A WAARSCHUWING**  
Geeft een potentiële gevaarlijke situatie aan die, indien niet vermeden, kan leiden tot overlijden of ernstig letsel.
- Houd u zich aan deze richtlijnen ter voorkoming van brand, brandwonden, letsel, elektrische schokken, beschadiging, oververhitting, anormale geuren en rook.
- Gebruik de machine voorgestelde netspanningsadapter voor de P-touch-labelmachine en steek deze in een netspanningsstation met de voorgeschreven spanning. Als u dit niet doet kan dit resulteren in schade aan, of storing van de machine.
  - Raak de machine niet aan tijdens ovens.
  - Gebruik de machine/netspanningsadapter niet op plaatsen met een hoge luchtvochtigheid, zoals een keuken.
  - Onderhoud het niet.
  - Plaats geen zware voorwerpen op het netsnoer of op de stekker, een beschadig of wrijvend deze onderdeel niet. Buig het netsnoer niet in het stopcontact haal.
  - Stek de stekker helemaal in het stopcontact. Gebruik geen slingercontact dat loszit.
  - Laat de machine niet tegen andere apparaten of tegen de randen van een kastje staan.
  - Ondanks dat de machine niet met heel schoon water spoelen en een arts raadplegen.
  - Demonteren en wrijvig de machine/netspanningsadapter niet.
  - Zorg ervoor dat de plaatplaat van de batterij niet worden gesloten met een metalen voorwerp.
  - Gebruik geen schone voorwerpen zoals een tangetje of pinset bij het verwisselen van de batterijen.
  - Werp de batterij niet in het vuur en stel ze niet bloot aan hitte.
  - Koppel de netspanningsadapter onmiddellijk los en verwijder de batterijen, en stop met het gebruik van de machine als u tijdens gebruik of opslag van de printer een abnormale geur, hitte, verkleuring, vervorming of iets ongewoon bemerkt.
  - Gebruik geen beschadigde of lekkende batterij, omdat de vloeistof op uw handen kan komen.
  - Gebruik geen vervormde of lekkende batterij, omdat de batterij waarvan het label is beschadigd, omdat dit overmatige verhitting kan leiden.

**CAUTION**

- Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injuries. Follow these guidelines to avoid personal injury, liquid leakage, burns, or heat.
- When you are not using the machine, store it out of the reach of children. In addition, do not allow children to put the machine parts or labels in their mouths. If any object has been swallowed, seek medical attention.
  - Do not touch metal parts around the print head immediately after printing.
  - If leaked fluid from batteries gets on your skin or clothes, immediately rinse them with clean water.
  - Do not use a battery other than specified. Do not use combinations of old and new batteries or combinations of different types, charging levels, manufacturers or models. Do not insert a battery with its plus and minus ends reversed.
  - Do not drop or hit the machine/AC adapter.
  - Do not press on the LCD (Liquid-Crystal Display).
  - Do not use your finger to clean the machine when you close the cassette cover.
  - Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
  - When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
  - Do not drop or hit the machine/AC adapter.
  - Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage. Failure to do so could result in damage or failure of the machine.
  - Do not use the machine/AC adapter in places of high humidity, such as bathrooms.
  - Do not overload the power cord.
  - Do not place heavy objects on, damage, or modify the power cord or plug. Do not forcibly bend or pull the power cord. Always hold the AC adapter when disconnecting from the electrical socket.
  - Make sure you fully insert the plug into the electrical socket. Do not use a socket that is loose.
  - Do not use the machine/AC adapter/power plug/batteries to get wet, for example by handling them with wet hands or splashing water on them.
  - Since loss of eyesight may occur when leaked fluid from batteries gets into your eyes, immediately rinse your eyes with plenty of clean water, and then seek medical attention.
  - Do not disassemble or modify the machine/AC adapter/batteries.
  - Do not allow a metal object to contact both the plus and minus ends of a battery.
  - Do not throw the batteries into fire or expose to heat.
  - Disconnect the AC adapter and remove batteries immediately and stop using the machine if you notice abnormal odour, heat, discolouration, deformation, or anything unusual while using or storing it.
  - Do not use a damaged or leaking battery as the fluid may get on your hands.
  - Do not use a deformed or leaking battery or one whose label is damaged as it may generate excessive heat.

**General Precautions**

- Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the colour of the label may change or be transferred onto other objects. Before applying the label, check the environmental conditions and the material.
- Do not use the machine in any way or for any purpose not described in this guide. Doing so may result in accidents or damage to the machine.
- Do not use the machine to print on paper that has been folded.
- Use only inkjet paper.
- Use a dry cotton swab to clean the print head. Never directly touch the print head with your hands.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine/AC adapter.
- Always use the suggested AC adapter for the P-touch labelling machine and plug it into a socket with the specified voltage.
- Do not use your finger to clean the machine when you close the cassette cover.
- Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly.
- When using Ni-MH rechargeable batteries, charge the batteries with a specialised battery charger before using the batteries. The AC adapter (AD-24ES) cannot be used to recharge Ni-MH rechargeable batteries.
- Do not drop or hit the machine

## Svenska

### Försäkran om överensstämmelse (endast Europa/Turkiet)

Brother Industries, Ltd.

15-1, Naeshiro-cho, Mizuho-ku,

Nagoya 467-8561 Japan

forsäkrar att den har produktion och nätdaptern överensstämmer med gällande krav i alla aktuella direktiv och föreskrifter i EU.

Försäkran om överensstämmelse (DoC) kan hämtas från Brother support websida.

Besök support.brother.com och:

• välj "Manualer"

• välj "Modell"

• välj "Konformitetsförklaring"

Klicka på "Ladda ner"

Du kan nu spara konformitetsförklaringen som en PDF-fil.

### Säkerhetsföreskrifter

#### A VARNING

Indikerar en potentiell riskfull situation som, om den inte undviks, skulle kunna resultera i dödsfall eller svåra personskador.

Följ dessa riktlinjer för att undvika risk för brand, brännskador, personskador, elektriska stötar, sprickor, överhettning, oenligt lukt eller rök.

• Använd endast nätdaptern för P-touch-tillverkningen och anslut den till ett uttag med anslutningskabeln. Annars finns det risk för skada eller problem med driften av skriven.

• Rör inte skriven när den är påslagen. Upplock sakare om baneret kvar har svält nöt.

• Rör inte vid knivbladet.

• Ta ut batterier och koppla bort nätdaptern om du inte ska använda skriven.

• Använd inte några anna batterier än de som angeqs i specifikationen. Undvik att kombinera gamla och nya batterier eller olika batterityper, olika laddningsnivärer, batterier från olika tillverkare eller av olika modeller.

• Använd aldrig batterier med omkastade plus- och minuspoler.

• Tryck inte på LCD-skärmen.

• Stopna inte fingrarna i skriven när du stänger kåssetluckan.

• Innan du använder uppladdningsbara Ni-MH-batterier ska du alltid läadda batterierna med den därför avsedda batteriladdaren innan du berar använda dem. Nätadapters (AD-24ES) kan inte användas till att ladda upp uppladdningsbara Ni-MH-batterier.

• Om du använder uppladdningsbara Ni-MH-batterier ska du alltid läadda batterierna med den därför avsedda batteriladdaren innan du berar använda dem. Nätadapters (AD-24ES) kan inte användas till att ladda upp uppladdningsbara Ni-MH-batterier.

**A VAR FÖRSIKTIG**

Indikerar en potentiell riskfull situation som, om den inte undviks, kan resultera i smärtor eller lindriga personskador.

### Suomi

### Vaativuustenmukaisuusvakutus (vain Eurooppa/Turkki)

Brother Industries, Ltd.

15-1, Naeshiro-cho, Mizuho-ku,

Nagoya 467-8561 Japan

Ilmoitetaan seuraavat tietotekniikka ovat kaikkien Euroopan yhteisen sisällä voimassa olevien ohjeiden ja ehdotusten ja asiamuotojen mukaisesti.

Vaativuustenmukaisuusvakutus voidaan ladata Brother-tukisivustosta.

Sirry osuttuviin support.brother.com:ja

• valitse "Vaativuustekniikka"

• valitse "Tulostus"

• valitse "Lataa".

Vaativuustenmukaisuusvakutus ladattuna PDF-tiedostona.

### Varoitusmekanismeet

#### A VARITOITUS

Ilmoitetaan mahdollista varaatilanneita, joita voi aiheuttaa vakaan tai kuolemaan johtavan tapaturman.

Noudattamalla näitä ohjeita voi välttää tulipaloja, palovammoja, vammoja, sähköiskuja, viulutumisia, ylikuumenemistä, epäilävistä ja sairauksia.

• Käytä aina etuoletusta verkkolaatetta ja yritä kytke se pistorasiaan, jossa on määritetty jännite.

Muuten laite saatetaan vahingoittua tai toimia virheellisesti.

• Älä kosketa lämpötilaa.

• Älä käytä laitetta ilman lämpötilaa.

• Älä vahingoita virtijohtoa tai pistekontaktaa, vaan kytke se pistorasiaan.

• Varmista, että aina pistekontakissa on korkealaatuinen ja turvallinen.

• Älä käytä laitetta ilman lämpötilaa.

• Älä käytä laitetta ilman lämpötilaa.